



Maintenance Procedure H1 & H2 Halo Cap Lamps



Spare Parts

Halo H1

Bezel ring



Protective glass lens, lens gasket and locking screw



Headpiece complete



Cable assembly with plug 'n play connectors



Battery pack complete with PCB and battery top



Halo H2

Bezel ring



Protective glass lens, lens gasket and locking screw



Headpiece complete



Cable assembly with plug 'n play connectors



Battery pack complete with PCB and battery top




A – Procedure for replacing the bezel ring, glass lens and lens gasket – H1 & H2

<p>1</p> <p>Use the H-screwdriver to loosen the bezel ring locking screw. When replacing the locking screw tighten using the H-screwdriver.</p>	<p>2</p> <p>Remove bezel ring by hand by unscrewing it anti-clockwise. Replace the bezel ring by screwing it on clockwise. NOTE: Do not under or over-tighten.</p>	<p>3</p> <p>Remove the bezel ring, glass lens and lens gasket. Clean with a clean dry cloth if dirty.</p>	<p>4</p> <p>After replacing the damaged item refit the gasket to the glass. NOTE: Do not touch the inside of the collimator. Clean collimator with a clean dry cloth if dirty.</p>
--	--	--	--



B – Procedure for replacing the headpiece, battery and cable – H1 & H2


<p>1</p> <p>Use the C-spanner to loosen the cable from the headpiece by unscrewing it anti-clockwise.</p>	<p>2</p> <p>Use the C-spanner to loosen the cable from the battery by unscrewing it anti-clockwise.</p>	<p>3</p> <p>Replace with a new version 2 cable, headpiece or battery.</p>	<p>4</p> <p>Use the C-spanner to fasten the cable to the headpiece and battery by screwing it on clockwise. NOTE: Be careful not to damage the two pins when reconnecting the cable.</p>
--	--	--	--

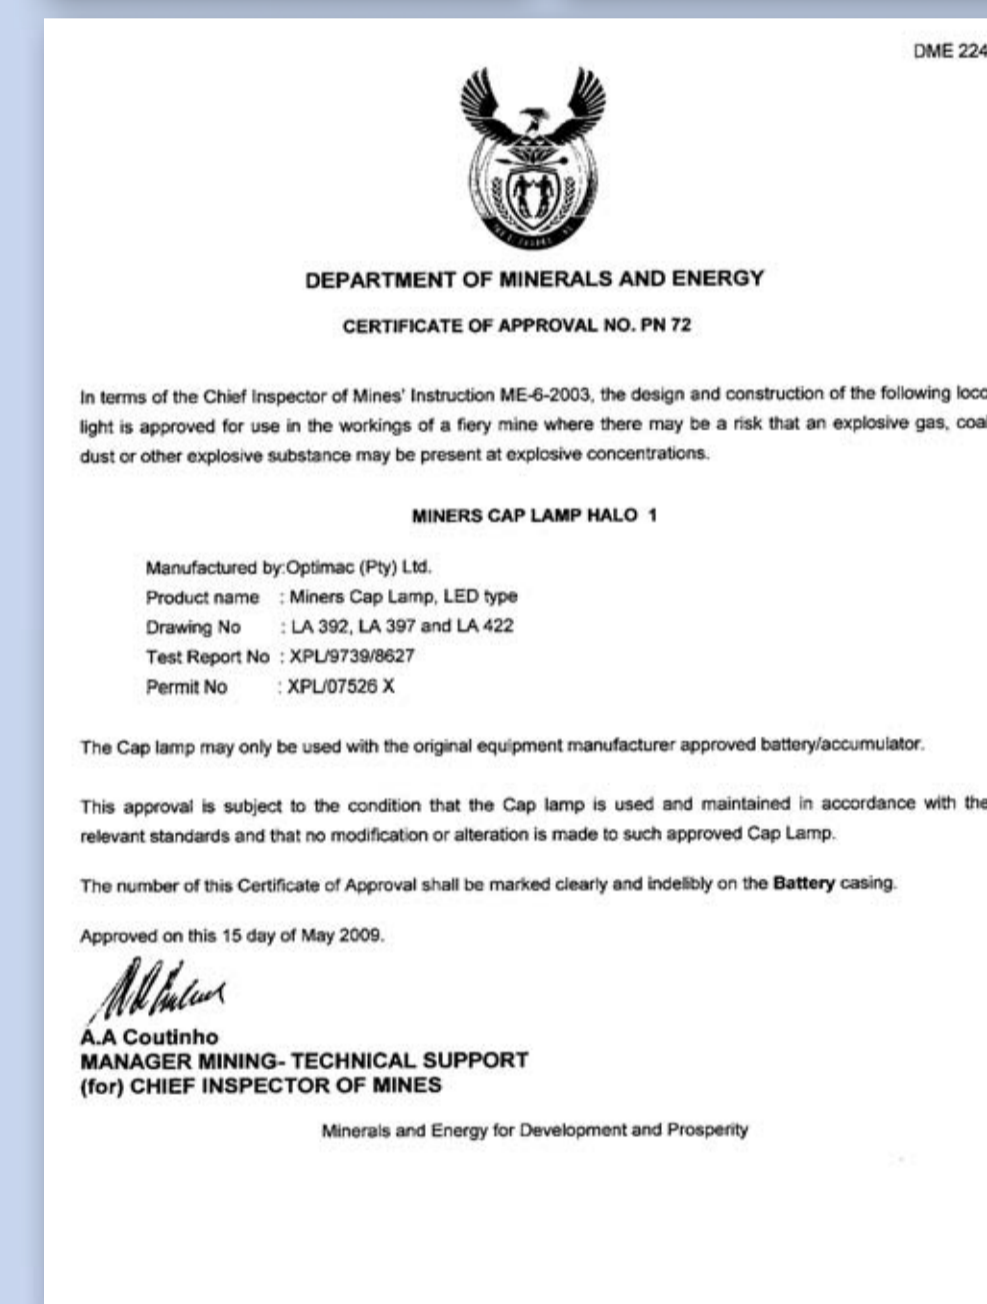

VERSION 2

VERSION 3

<p>1</p> <p>Use the H-screwdriver to loosen the cable locking screw on the headpiece. Turn the cable anti-clockwise until it is detached from the headpiece.</p>	<p>2</p> <p>Use the H-screwdriver to loosen the cable locking screw on the battery. Turn cable anti-clockwise until it is detached from the battery.</p>	<p>3</p> <p>Replace with a new version 3 cable, headpiece or battery.</p>	<p>4</p> <p>Turn the cable clockwise until it is fastened to the headpiece and battery. Use the H-screwdriver to fasten the cable to the headpiece and battery.</p>
---	---	--	--

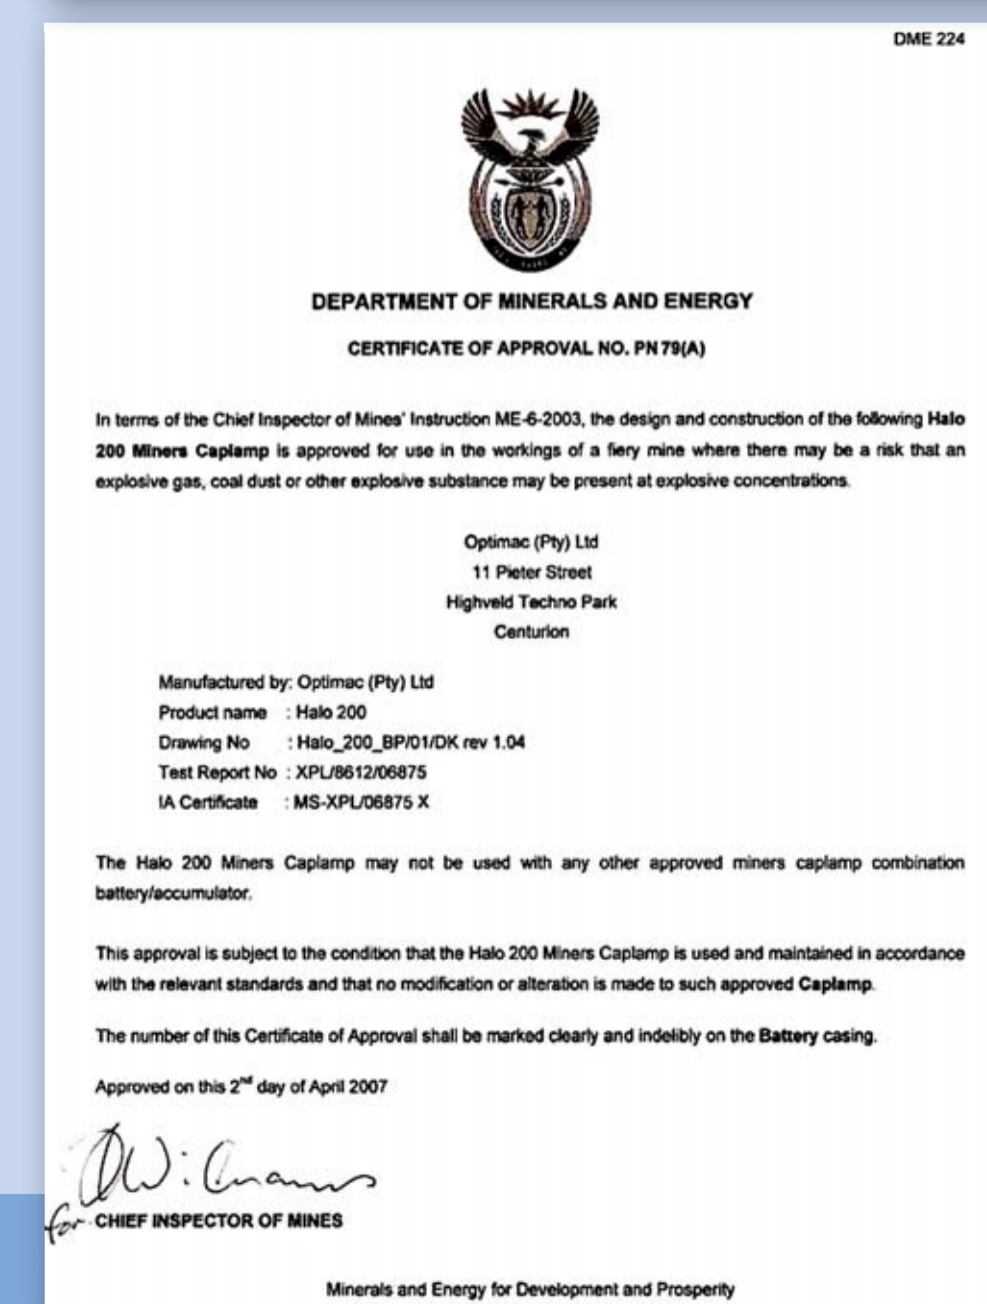

Tools & Accessories

<p>C-Spanner</p>	<p>H-Screwdriver</p>
<p>Complete Tool Kit</p>	<p>Single Charger</p>



Optimac (Pty) Ltd
Company Reg. Number 2005/003765/07
7 Delta Street, Mabe Business Park
Old Pretoria Road, Rustenburg
www.optimac.com | info@optimac.co.za

Telephone +27 (0) 14 592 9804 / 0860 CAPLAMP
Fax +27 (0)86 555 0377